

TPA0223 Audio Power Amplifier Evaluation Module

User's Guide

IMPORTANT NOTICE

Texas Instruments and its subsidiaries (TI) reserve the right to make changes to their products or to discontinue any product or service without notice, and advise customers to obtain the latest version of relevant information to verify, before placing orders, that information being relied on is current and complete. All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, patent infringement, and limitation of liability.

TI warrants performance of its semiconductor products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are utilized to the extent TI deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.

Customers are responsible for their applications using TI components.

In order to minimize risks associated with the customer's applications, adequate design and operating safeguards must be provided by the customer to minimize inherent or procedural hazards.

TI assumes no liability for applications assistance or customer product design. TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of TI covering or relating to any combination, machine, or process in which such semiconductor products or services might be or are used. TI's publication of information regarding any third party's products or services does not constitute TI's approval, warranty or endorsement thereof.

Copyright © 2000, Texas Instruments Incorporated

Related Documentation From Texas Instruments

- *TI Plug-N-Play Audio Amplifier Evaluation Platform* (literature number SLOU011) provides detailed information on the evaluation platform and its use with TI audio evaluation modules.
- TPA0223 2-W MONO AUDIO POWER AMPLIFIER WITH HEADPHONE DRIVE (literature number SLOS277) This is the data sheet for the TPA0223 audio amplifier integrated circuit.

FCC Warning

This equipment is intended for use in a laboratory test environment only. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to subpart J of part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

iii

Contents

| _ | | | |
|-----|-----------------|----------------------------------------------------------------------------|--------|
| 1 | | duction | |
| | 1.1 | Feature Highlights | |
| | 1.2 1.3 | Description | |
| _ | | · | |
| 2 | Oper 2.1 | ation | |
| | 2.2 | Quick Start List for Platform | |
| | 2.3 | Quick Start List for Stand-Alone | |
| | 2.4 | Stand-Alone Connection Diagrams | |
| | | 2.4.1 TPA0223 Mono EVMs Connected for Stereo BTL Output | |
| | 2.5 | 2.4.2 TPA0223 Mono EVM Connected for SE Stereo Headphone Output | |
| | 2.5 | Reference | |
| | | 2.5.2 EVM Parts List | |
| | | 2.5.3 Module PCB Layers | |
| | | | |
| | | E | iauroc |
| | | Г | igures |
| | | | |
| = | | | |
| 1- | 1 T | The TI TPA0223 Audio Amplifier Evaluation Module | 1-3 |
| 2-2 | | Quick Start Platform Map | |
| 2- | | Nodule Preparation | |
| 2-4 | | PA0223 Mono EVMs Connected for Stereo BTL Output | |
| 2- | | PA0223 Mono EVM Connected for Single-Ended Stereo Headphone Output | |
| 2-6 | | PA0223 EVM Schematic Diagram | 2-9 |
| 2– | | PA0223 EVM PCB | |
| 2-8 | | PA0223 EVM Silkscreen | |
| 2-9 | | PA0223 EVM Top LayerPA0223 EVM Bottom Layer | |
| 2- | 10 1 | PA0223 EVIVI BOILOTTI Layer | Z-1Z |
| | | | Tablaa |
| | | | Tables |
| | | | |
| | | | |
| 2- | | ypical TI Plug-N-Play Platform Jumper and Switch Settings for the TPA0223. | |
| 2-2 | 2 T | Typical TPA0223 EVM Jumper Settings | 2-1 |
| 2-3 | | Platform Jumper and Switch Settings for the TPA0223 | |
| 2-4 | | ypical TPA0223 EVM Jumper Settings | |
| 2-6 | | PA0223 EVM MONO-IN Input Configurations | |
| 2- | 7 T | ypical TPA0223 EVM Jumper Settings | 2-7 |
| 2-8 | | ypical TPA0223 EVM Jumper Settings | |
| 2-9 | 9 T | PA0223 EVM Parts List | 2-10 |


Chapter 1

Introduction

This chapter provides an overview of the Texas Instruments (TI) TPA0223 audio amplifier evaluation module (SLOP267). It includes a list of EVM features, a brief description of the module illustrated with a diagram, and a list of EVM specifications.

| Topi | c Page |
|------|----------------------------|
| 1.1 | Feature Highlights1–2 |
| 1.2 | Description |
| 1.3 | TPA0223 EVM Specifications |

1.1 Feature Highlights

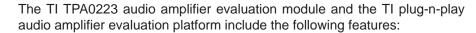


- ☐ TPA0223 mono 2-W audio power amplifier evaluation module
 - Single channel, bridge-tied load (BTL) or dual-channel single-ended operation
 - 2 W output power into 4 Ω at 5 V, BTL
 - \blacksquare 0.6 W output power into 4 Ω at 3 V, BTL
 - Low current consumption in shutdown mode (1 μA)
 - Stereo headphone drive
 - Separate input for mono signal
- Quick and easy configuration with the TI plug-n-play audio amplifier evaluation platform
 - Evaluation module is designed to simply plug into the platform, automatically making all signal, control, and power connections
 - Platform provides flexible power options
 - Jumpers on the platform select power and module control options
 - Switches on the platform route signals
 - Platform provides quick and easy audio input and output connections
- Platform power options
 - External 5-V 15-V DC V_{CC} supply inputs
 - External regulated V_{DD} supply input
 - Socket for onboard 5 V/3.3 V V_{DD} voltage regulator EVM
 - Onboard overvoltage and reverse polarity power protection
- ☐ Platform audio input and output connections
 - Left and right RCA phono jack inputs
 - Miniature stereo phone jack input
 - Mono (right) RCA phono jack output
 - Mono (right) compression speaker terminal output
 - Miniature stereo headphone jack output

1-2 Introduction

1.2 Description

The TPA0223 audio power amplifier evaluation module is a complete, 2-watt mono audio power amplifier. It consists of the TI TPA0223 mono 2-W audio power amplifier IC along with a small number of other parts mounted on a circuit board that measures approximately 2 1/4 inches by 1 1/2 inches (Figure 1–1).

Figure 1–1. The TI TPA0223 Audio Amplifier Evaluation Module

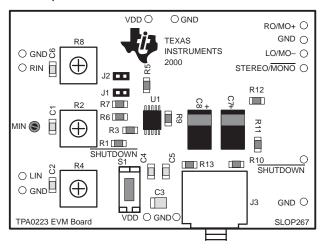

Single in-line header pins extend from the underside of the module circuit board to allow the EVM to be plugged into the TI plug-n-play audio amplifier evaluation platform, or to be wired directly into existing circuits and equipment when used stand-alone.

The platform has room for a single TPA0223 evaluation module and is a convenient vehicle for demonstrating Tl's audio power amplifier and related evaluation modules. The EVMs simply plug into the platform, which automatically provides power to the modules, interconnects them correctly, and connects them to a versatile array of standard audio input and output jacks and connectors. Easy-to-use configuration controls allow the platform and EVMs to quickly model many possible end-equipment configurations.

There is nothing to build, nothing to solder, and nothing but the speakers included with the platform to *hook up*.

1.3 TPA0223 EVM Specifications

| Supply voltage range, V _{DD} 2.5 V to 5.5 V |
|-------------------------------------------------------------------------------------|
| Supply current, I _{DD} |
| Continuous output power per channel, P_O : 4- Ω BTL, V_{DD} =5 V 2 W |
| Audio input voltage, V _{I,} 5 Vp–p max |
| Minimum load impedance, R_1 |

1-4 Introduction

Chapter 2

Operation

The quick start lists in this chapter contain steps that can be followed to quickly prepare the TPA0223 mono audio amplifier EVM for use either with the TI plug-n-play audio amplifier evaluation platform or for stand-alone operation. Using the EVM with the TI evaluation platform is a quick and easy way to connect power, signal and control inputs, and signal outputs to the EVM, using standard connectors.

The platform switch and jumper settings shown in Table 2–1 are typical for the TPA0223 EVM.

Table 2–1. Typical TI Plug-N-Play Platform Jumper and Switch Settings for the TPA0223

| EVM | JP6 | JP7 | JP8 | S2 | S3 | |
|----------------|------|-----|-----|--------|----|--|
| P-N-P Platform | Mode | Χ | Hi | Note 2 | Χ | |

Notes: 1) X = Don't care

2) Set S2 to ON when signal conditioning board is installed in U1; set S2 to OFF when no signal conditioning board is installed.

Table 2–2. Typical TPA0223 EVM Jumper Settings

| EVM | J1 | J2 |
|---------|----|----|
| TPA0223 | ON | ON |

Note: ON = Shunt installed OFF = Open

Topic Page

| 2.1 | Precautions |
|-----|------------------------------------|
| 2.2 | Quick Start List for Platform2–3 |
| 2.3 | Quick Start List for Stand-Alone |
| 2.4 | Stand-Alone Connection Diagrams2–7 |
| 2.5 | Reference |

2.1 Precautions


Power Supply Input Polarity and Maximum Voltage

Always ensure that the polarity and voltage of the external power connected to V_{CC} power input connector J1, J2, and/or V_{DD} power input connector J6 are correct. Overvoltage or reverse-polarity power applied to these terminals can open onboard soldered-in fuses and cause other damage to the platform, installed evaluation modules, and/or the power source.

Inserting or Removing EVM Boards

Do not insert or remove EVM boards with power applied—damage to the EVM board, the platform, or both may result.

Figure 2-1. Quick Start Platform Map

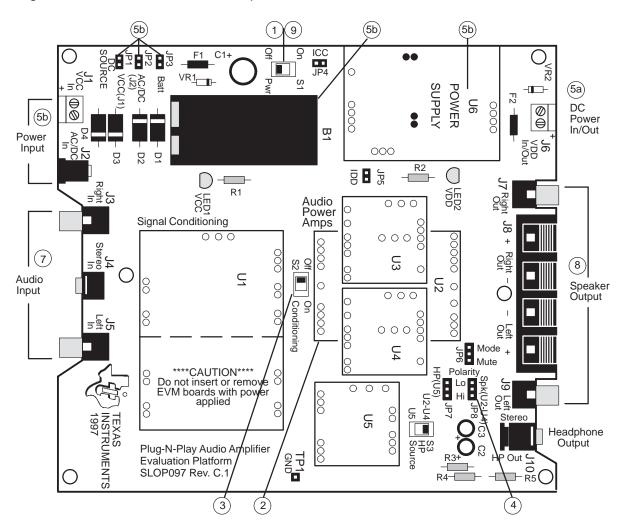

2.2 Quick Start List for Platform

Follow these steps when using the TPA0223 EVM with the TI plug-n-play audio amplifier evaluation platform (see the platform user's guide, SLOU011, for additional details).

Platform preparations

- 1) Ensure that all external power sources are set to *OFF* and that the platform power switch **S1** is set to *OFF*.
- 2) Install a TPA0223 module in platform socket **U2**, taking care to align the module pins correctly.
- 3) Use switch **S2** to select or bypass the signal conditioning EVM (**U1**).
- 4) Set control signal Polarity jumper JP8 to Hi.

Table 2–3. Platform Jumper and Switch Settings for the TPA0223

| EVM | JP6 | JP7 | JP8 | S2 | S 3 |
|----------------|------|-----|-----|--------|------------|
| P-N-P Platform | Mode | Х | Hi | Note 2 | Х |

Notes:

- 1) X = Don't care
- Set S2 to ON when signal conditioning board is installed in U1; set S2 to OFF when no signal conditioning board is installed.

Power supply

- 5) Select and connect the power supply (ensure power supply is set to *OFF*):
 - a) Connect an external regulated power supply set to 5 V to platform V_{DD} power input connector **J6**, taking care to observe marked polarity, or
 - b) Install a voltage regulator EVM (SLVP097 or equiv.) in platform socket
 U6. Connect a 7 V 12 V power source to a platform V_{CC} power input
 J1 or J2 and jumper the appropriate power input (see platform user's guide).

Inputs and outputs

- 6) Ensure that the audio signal source level is set to minimum.
- 7) Connect the audio source to left and right RCA phono jacks **J3** and **J5** or stereo miniature phone jack **J4**.
- 8) Connect the speaker to the right RCA jack **J7** or to the stripped wire speaker connector **J8**. Make sure the speaker is connected to the Right **+** and **-** terminals.

■ Evaluation Module Preparations

Figure 2–2. Module Preparation

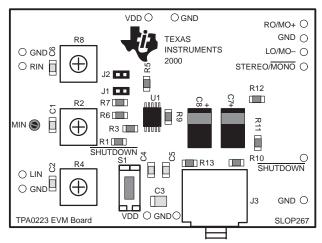


Table 2-4. Typical TPA0223 EVM Jumper Settings

| EVM | J1 | J2 |
|---------|----|----|
| TPA0223 | ON | ON |

Note: ON = Shunt installed, OFF = Open

☐ Power-Up

9) Verify correct voltage and input polarity and set the external power supply to *ON*. If V_{CC} and an onboard regulator EVM are used to provide V_{DD}, set platform power switch **S1** to *ON*.

Platform LED2 should light indicating the presence of V_{DD} , and the evaluation modules installed on the platform should begin operation.


10) Adjust the signal source level or adjust potentiometers **R4** and **R8** on the EVM as needed.

2-4 Operation

2.3 Quick Start List for Stand-Alone

Follow these steps to use the TPA0223 EVM stand-alone or when connecting it into existing circuits or equipment. Connections to the TPA0223 module header pins can be made via individual sockets, wire-wrapping, or soldering to the pins, either on the top or the bottom of the module circuit board.

Figure 2-3. Module Preparation

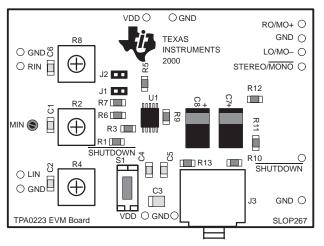

Power supply

- 1) Ensure that all external power sources are set to OFF.
- Connect an external regulated power supply set to 5 V to the module VDD and GND pins, taking care to observe marked polarity.

Inputs and outputs

- 3) Ensure that audio signal source level adjustments are set to minimum.
- 4) Connect the right (left) positive lead of the audio source to the module **RIN** (**LIN**) pins and the negative lead to the **GND** pin.
- 5) Connect a speaker to the module **RO/MO+** and **LO/MO-** pins or plug a headphone into to EVM headphone jack **J3**.

Evaluation module preparations

6) Set the EVM jumpers as shown in Table 2–5.

Table 2–5. Typical TPA0223 EVM Jumper Settings

| EVM | J1 | J2 |
|---------|----|----|
| TPA0223 | ON | ON |

Note: ON = Shunt installed OFF = Open

EVM jumpers **J1** and **J2** allow the MONO-IN input pin to be driven from either the **MIN** test point or from a combination of the left and right channel inputs. The four possible configurations are shown in Table 2–6.

Table 2–6. TPA0223 EVM MONO-IN Input Configurations

| J1 | J2 | MONO-IN INPUT |
|---------|-----|--------------------|
| OFF OFF | | MIN test point |
| OFF | ON | RIN only |
| ON | OFF | LIN only |
| ON | ON | Sum of LIN and RIN |

- Notes: 1) ON = Shunt installed, OFF = Open
 - 2) If the MIN input is used as the mono input, potentiometer R2 may be used to adjust the EVM gain.
- 7) Adjust EVM potentiometers R4 and R8 to approximately mid point.

☐ Power-up

8) Verify correct voltage and input polarity, and set the external power supply to ON.

The EVM should begin operation.

9) Adjust the signal source level or adjust potentiometers R4 and R8 on the EVM as needed.

2-6 Operation

2.4 Stand-Alone Connection Diagrams

The power supply range is 4.5 V to 5.5 V and isolated RO/MO+ and LO/MO- lines for BTL operation are required.

Note that the shutdown signal applied to the EVM $\overline{\text{SHUTDOWN}}$ pin must be able to supply enough current to overcome the pullup resistor on the module (100 k Ω).

2.4.1 TPA0223 Mono EVMs Connected for Stereo BTL Output

Figure 2–4 shows two TPA0223 EVMs connected for stereo BTL operation.

Figure 2-4. TPA0223 Mono EVMs Connected for Stereo BTL Output

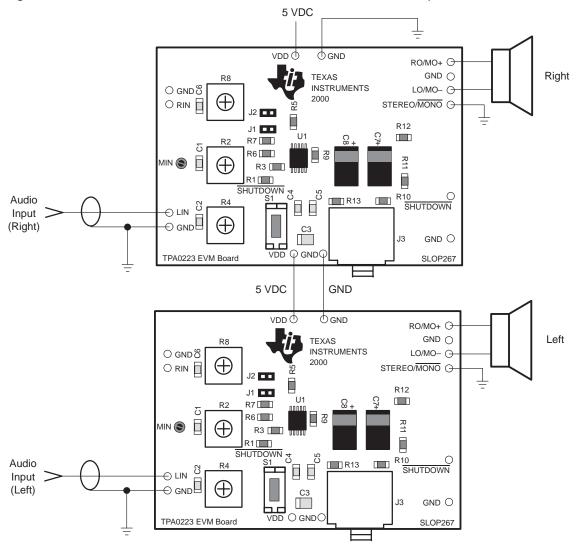


Table 2-7. Typical TPA0223 EVM Jumper Settings

| EVM | J1 | J2 |
|---------|----|-----|
| TPA0223 | ON | OFF |

Note: ON = Shunt installed, OFF = Open

2.4.2 TPA0223 Mono EVM Connected for Single-Ended Stereo Headphone Output

Figure 2–5 shows a TPA0223 EVM connected for single-ended stereo headphone operation.

Figure 2–5. TPA0223 Mono EVM Connected for Single-Ended Stereo Headphone Output

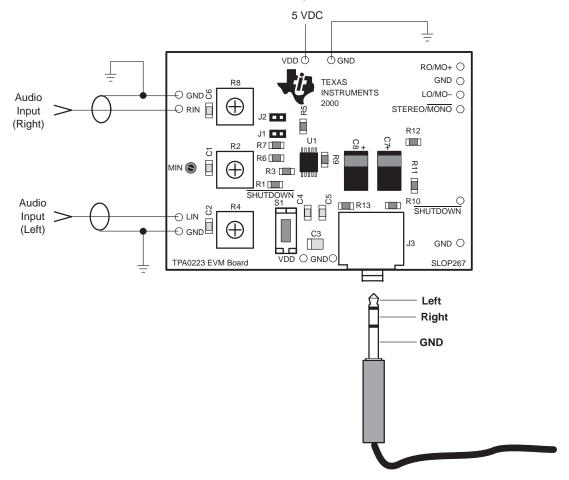


Table 2-8. Typical TPA0223 EVM Jumper Settings

| EVM | J1 | J2 |
|---------|----|----|
| TPA0223 | Х | Χ |

Note: ON = Shunt installed, OFF = Open, X = Don't care

2-8 Operation


2.5 Reference

This section includes the TPA0223 EVM schematic, the EVM parts list, and the module PCB layers.

2.5.1 EVM Schematic

Figure 2-6 shows the TPA0223 EVM schematic.

Figure 2-6. TPA0223 EVM Schematic Diagram

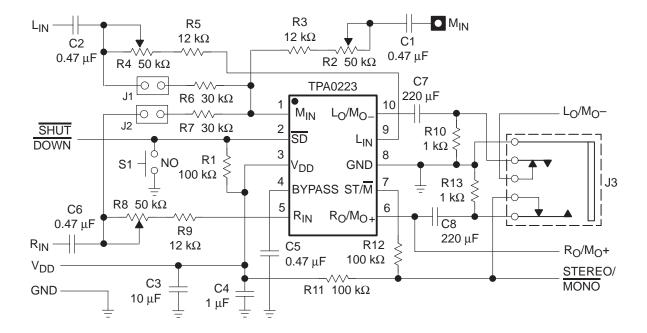

2.5.2 EVM Parts List

Table 2–9 is the TPA0223 EVM parts list.

Table 2–9. TPA0223 EVM Parts List

| Ref. | Description | Size | EVM Qty. | Manufacturer/ Part Number | Vendor Number |
|-------------------|----------------------------------------------------|--------------------------|-------------|------------------------------|--------------------------|
| C4 | Capacitor, 1 μF @ 16 V, +80%/–20%, nonpolarized | 1206 | 1 | Murata GRM42-6Y5V105Z16BL | Newark 93F2254 |
| C1, C2, C5, C6 | Capacitor, 0.47 μF @ 16 V +80%/–20%, nonpolarized | 0805 | 4 | Murata GRM40-Y5V474Z16 | |
| C3 | Capacitor, 10 μF @ 6.3 V | Α | 1 | Panasonic ECS-TOJY106R | |
| C7, C8 | Capacitor, 220 μF @ 10 V | 7.3 mm (L) 4.3 mm (W) | 2 | Sanyo POSCAP 10TPB220M | |
| R2, R4, R8 | Potentiometer, 50 k Ω , 1/2 W, through-hole | | 3 | Bourns 3323P–50K | Digi-Key 3323P-503-ND |
| R10, R13 | Resistor, 1 k Ω , 1/10 W, 5% | 0805 | 2 | Panasonic ERJ-6GEYJ102V | Digi-Key P1.0KACT-ND |
| R1, R11, R12 | Resistor, 100 k Ω , 1/10 W, 5% | 0805 | 3 | Panasonic ERJ-6GEYJ104V | Digi-Key P100KACT-ND |
| R3, R5, R7 | Resistor, 12 k Ω , 1/10 W, 5% | 0805 | 3 | Panasonic ERJ-6GEYJ123V | Digi-Key P12KACT-ND |
| S1 | Switch, momentary | | 1 | Panasonic EVQ-PJS04K | Digi-Key P8050SCT-ND |
| J1, J2 | Header, 2 position | 2 mm | 2 | Norcomp | Digi-Key 2163S-02-ND |
| J1, J2 | Shunts | 2 mm | 3 | 2JM–G | Digi-Key SPE1302-ND |
| J3 | MINI STEREO PHONE JACK, PCB MOUNT | 3.5 mm | 1 | | Mouser 161–3504 |
| MIN | Test point, RED | | 1 | Farnell: 240-345 | |
| | Terminal Post Headers | | 14 | Sullins PTC36SABN | Digi-Key S1022-36-ND |
| U1 | IC, TPA0223 2-W mono audio amplifier | MSOP-10 | 1 | TI TPA0223DGN | |

2-10 Operation

2.5.3 Module PCB Layers

The following illustrations depict the TPA0223 EVM PCB layers and silkscreen. These drawings are not to scale. Gerber plots can be obtained from any TI Sales Office.

Figure 2-7. TPA0223 EVM PCB

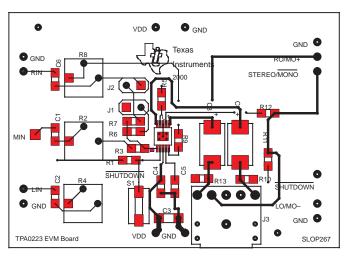


Figure 2-8. TPA0223 EVM Silkscreen



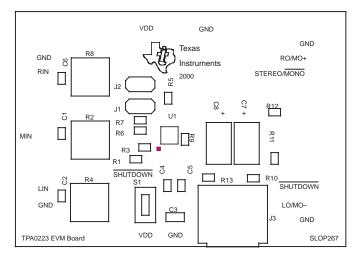


Figure 2–9. TPA0223 EVM Top Layer

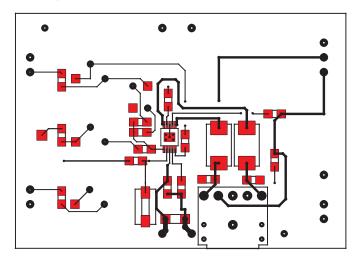

Note: All open areas are solid copper ground planes.

Figure 2–10. TPA0223 EVM Bottom Layer

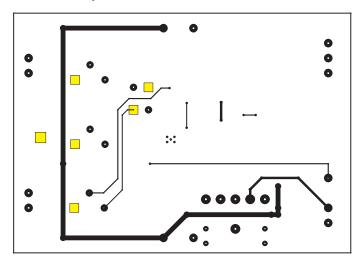

Note: All open areas are solid copper ground planes.

2-12